

The Lights on Your Charger



Steady Red - CHARGING: Battery is in rapid charge mode.

Flashing Green - ALMOST DONE: Battery has completed rapid charge (>90% available capacity). Battery is in Top-Off charge (Trickle charge).

Steady Green - DONE: Battery has completed charging and is fully charged.

Steady Yellow - Battery is in **recondition** mode. This is good and important for your battery. The charger will drain it all the way down, and then recharge. If you need to cancel for some reason, lift the battery out and put it back in. It will charge normally, and wait to recondition for the next time.

Flashing Red/Green - Battery has completed charging and is fully charged. Battery continues to be usable, but may be nearing the end of its rated service life.

Flashing Yellow - Battery is recognized by charger but is waiting to charge. (Either the battery voltage is too low or the battery temperature is too low or too high to allow charging. When this condition is corrected, the battery will automatically begin charging.)

Flashing Red - Battery is unchargeable or not making proper contact. Reseat the battery.



GOOD →

Questions? Radio Problems?

- Contact the BCSO Communications Division:
 - Phone: (513) 785-1299
 - Email: radiohelp@butlersheriff.org
 - Web: <http://butlersheriff.org/radio>
- Visit:
 - 1810 Princeton Rd, Hamilton
 - Monday – Friday, 0800-1630

